


Lexus Climate Concierge

The climate control seats^{*}/seat heater^{*} on each seat and heated steering wheel^{*} are automatically controlled according to the set temperature of the air conditioning system, outside temperature, cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

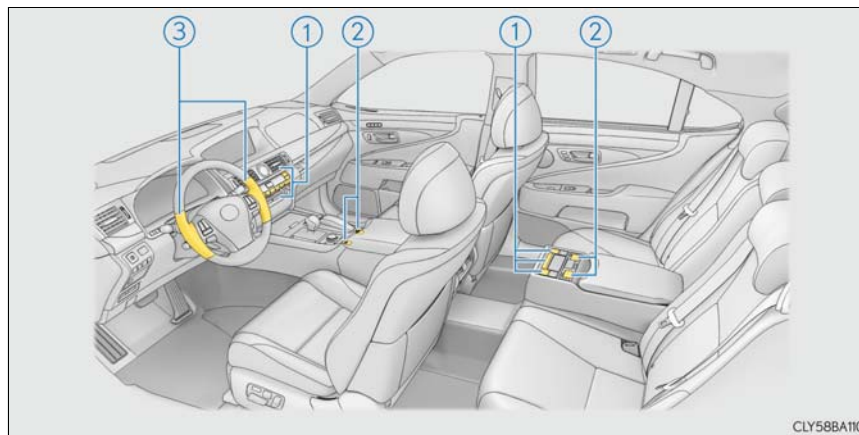

- ① Automatic air conditioning system (→P. 398, 412)

Set the air conditioning system to automatic mode.

The temperature for the driver's seat, front passenger's seat and both rear seats^{*} can be adjusted individually.

- ② Climate control seats^{*}/seat heaters^{*} (→P. 697, 698)

Select "AUTO" mode on each seat.

Seat heater, off, ventilation^{*} or seat cooler^{*} is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.

- ③ Heated steering wheel^{*} (→P. 695)

Turned on automatically according to the outside and cabin temperature when the engine is started.

Operates for a maximum of 30 minutes.

^{*}: If equipped